
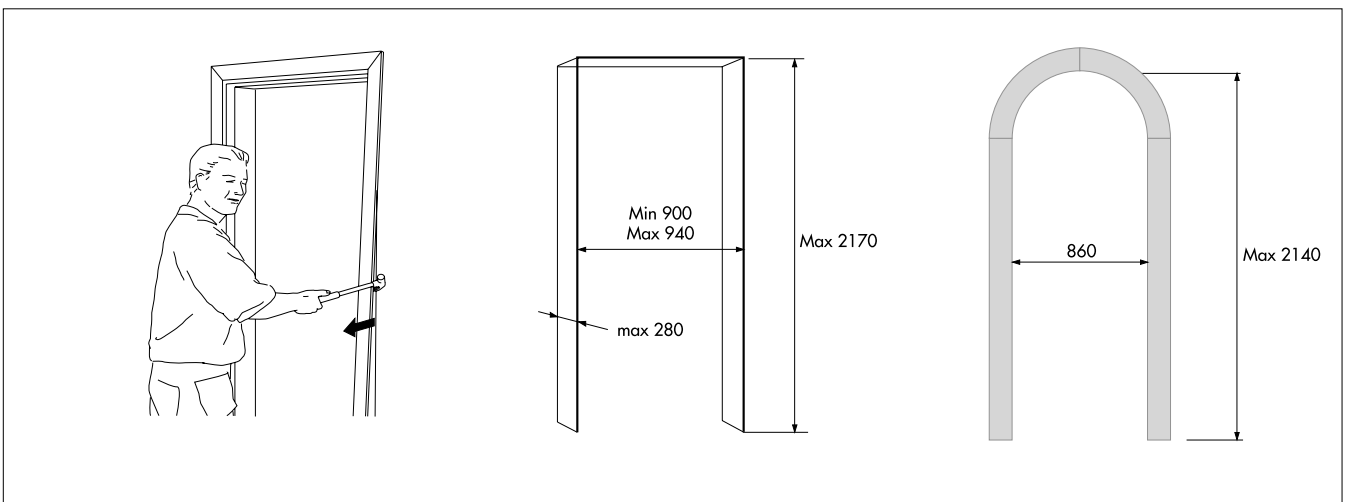
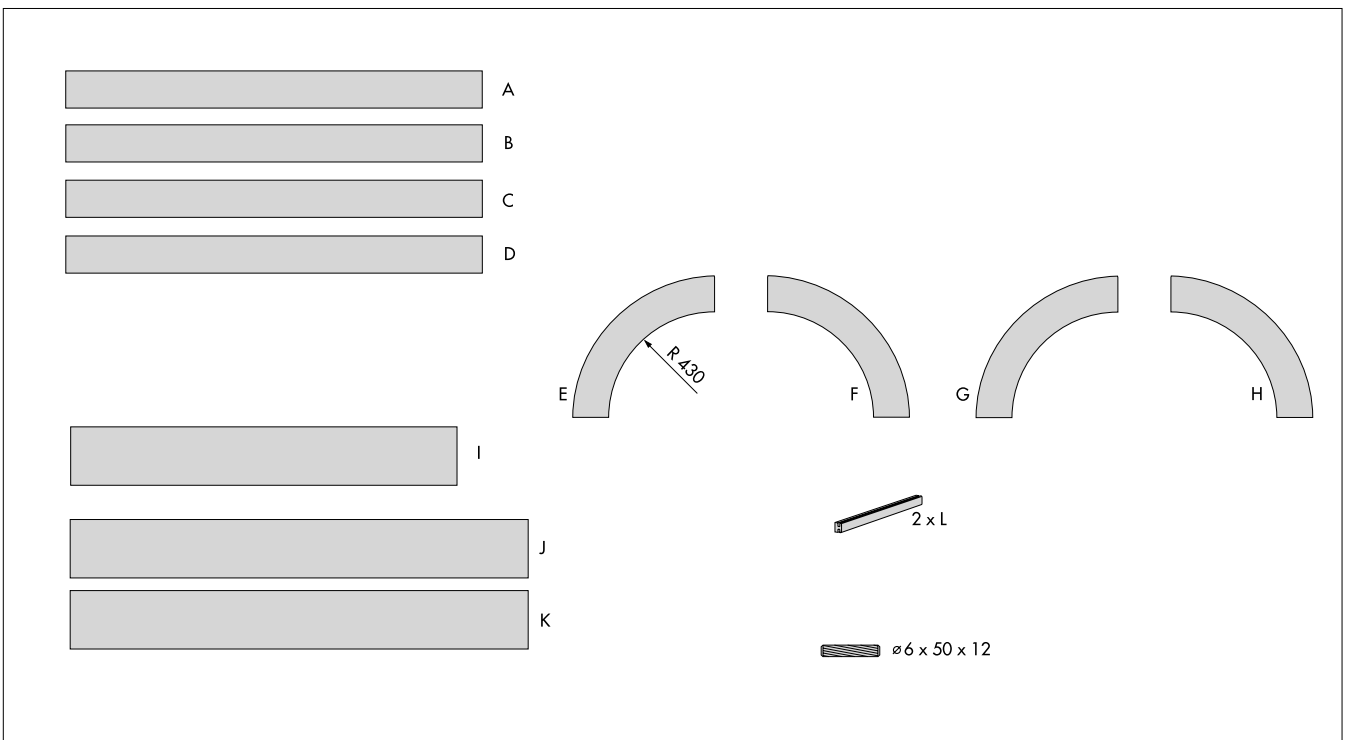
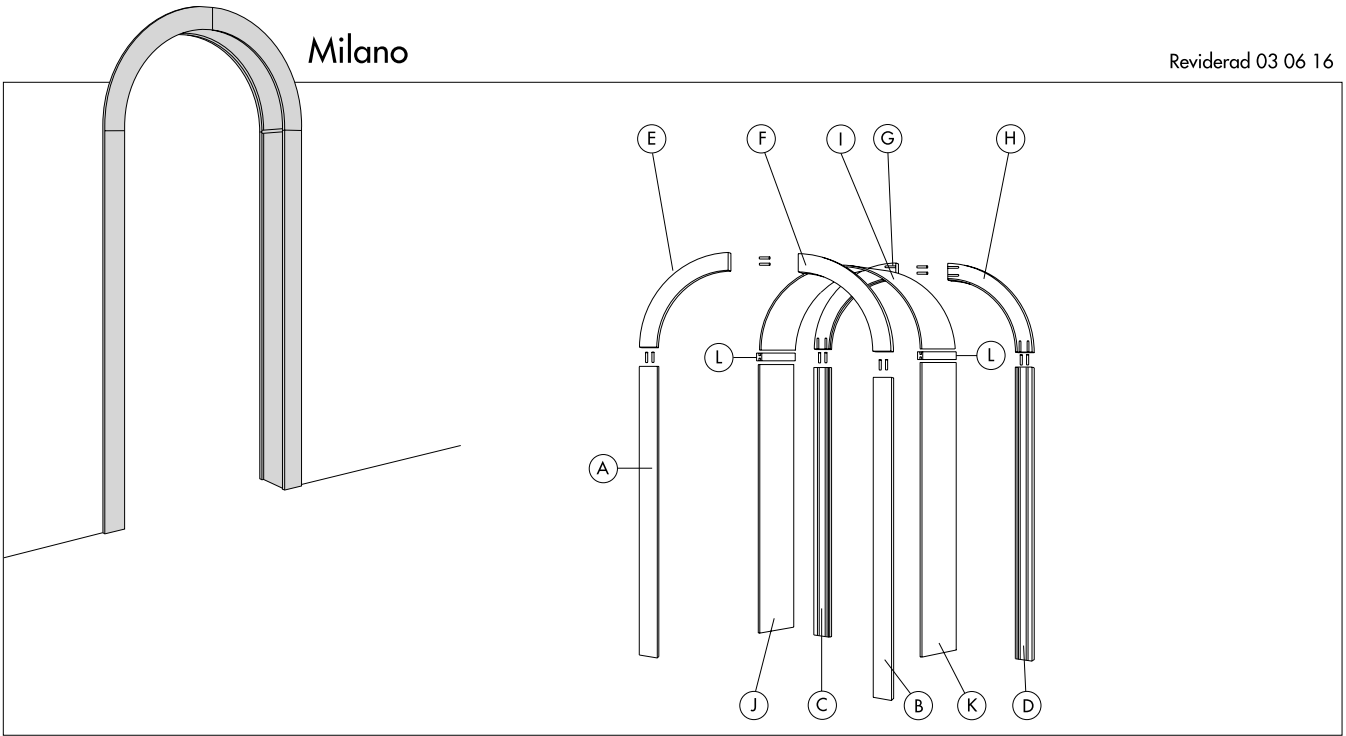


Ny monteringsanvisning! New assembly instruction! Neues montageanleitung!







Milano

Reviderad 03 06 16



 = mm

Milano

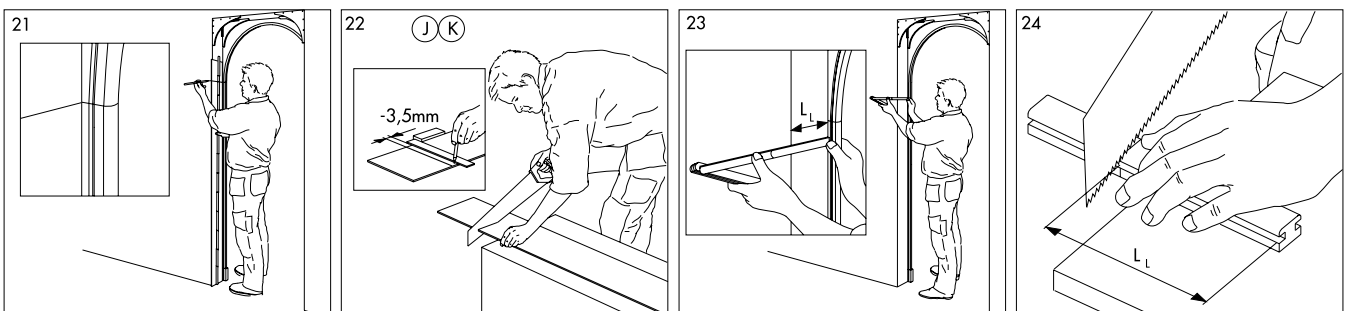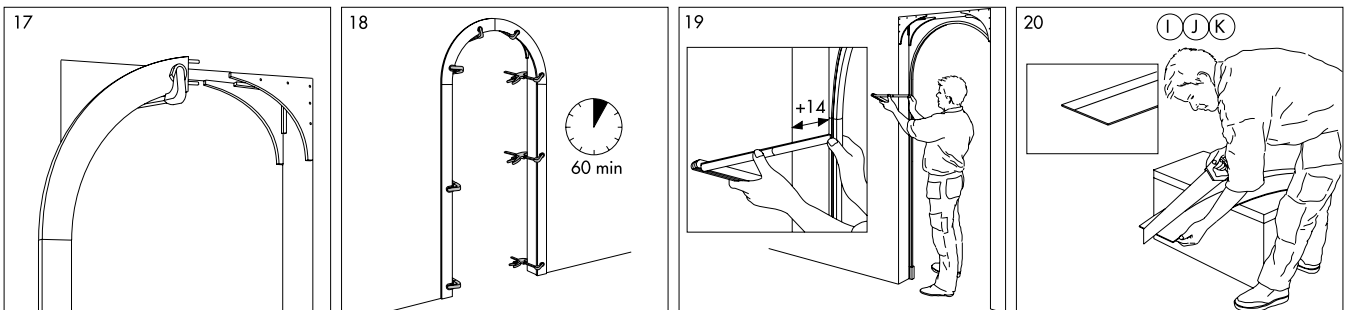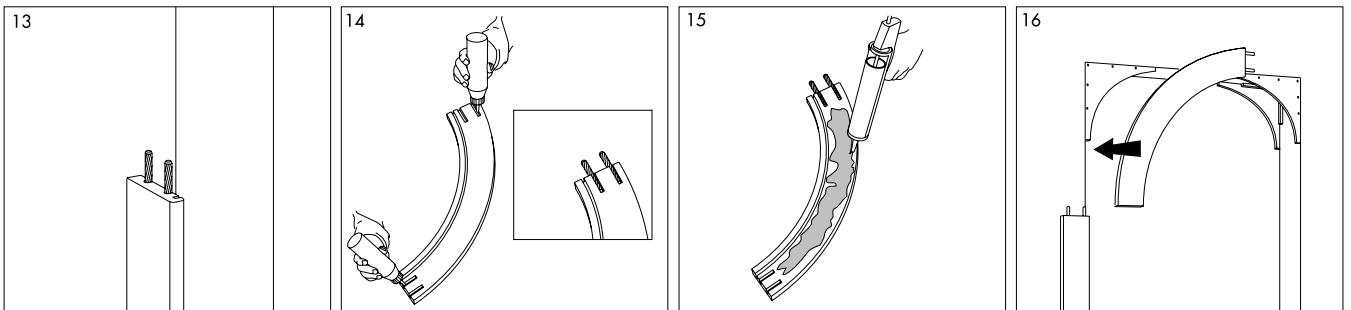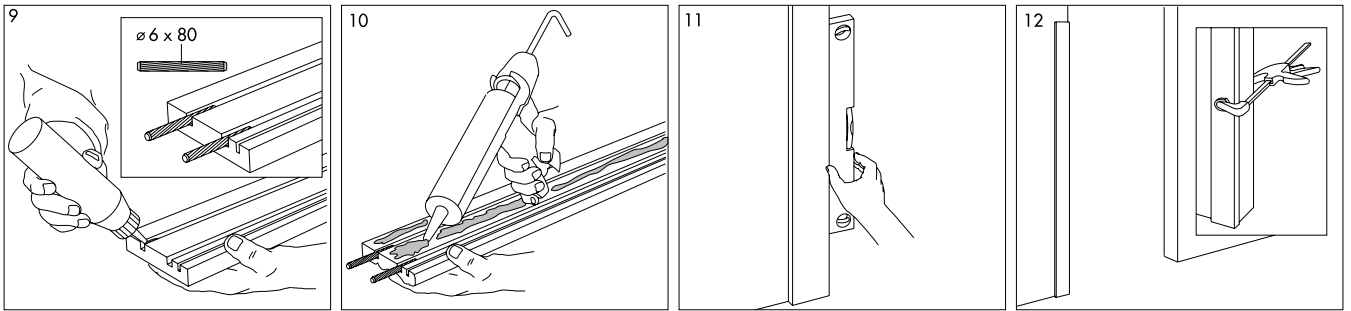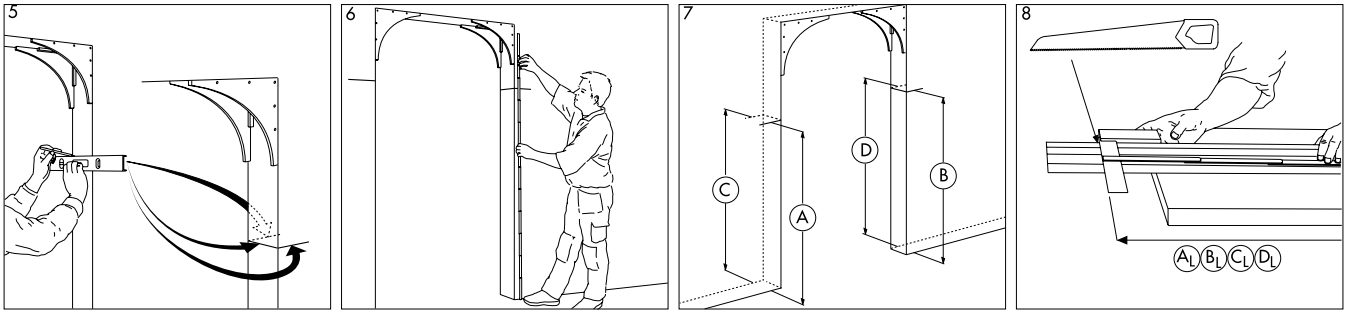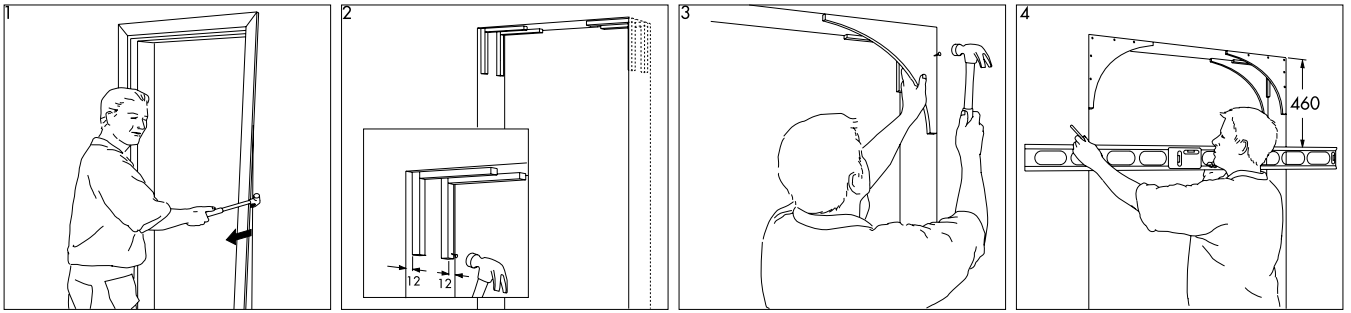

Milano

