

MONTERINGSANVISNING



ASSEMBLY INSTRUCTIONS

DIPP MATBORD

18021-580



Assembly instructions | Monteringsanvisning

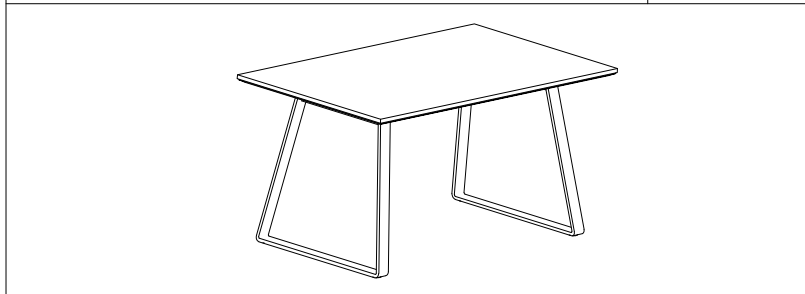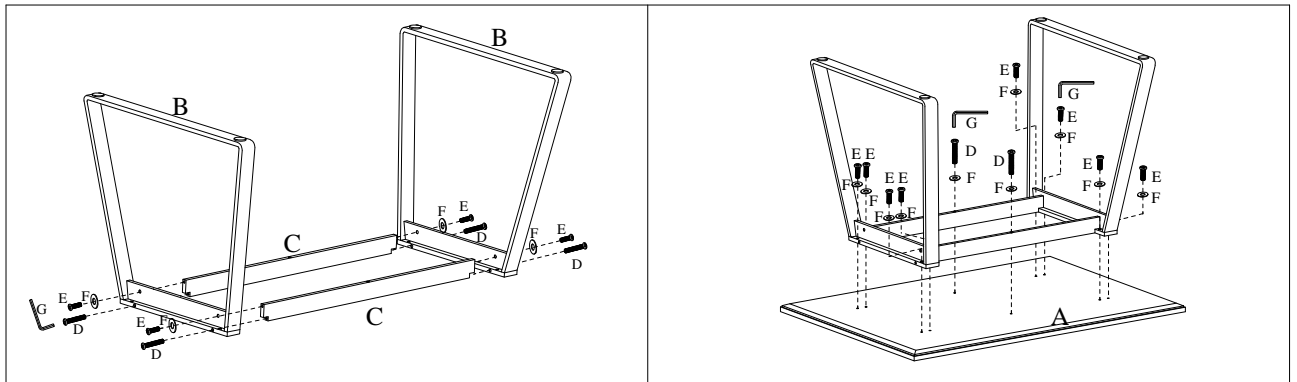




A		1
B		2
C		2
D		6
E		12
F		14
G		1

88888-281


88888-281

88888-281

88888-281

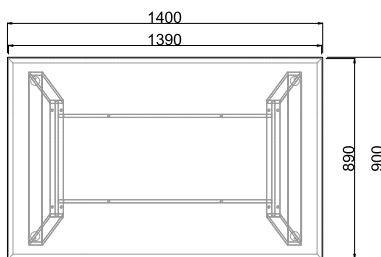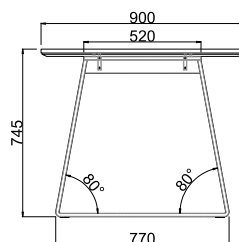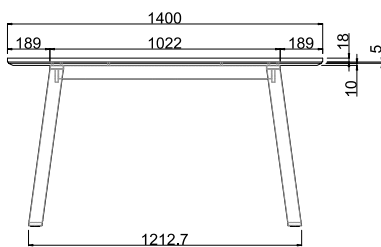

T=18mm大理石, 正面及四周做防水处理

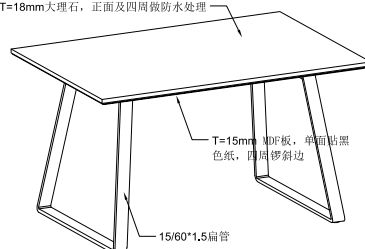

2020

VENTURE DESIGN
HOME & INTERIOR